

# OMF Performance Gravel Guard Instructions


**Tools Needed:** Drill Motor, 1/8" Drill Bit, 1/4" Drill Bit, Philips Head Bit for Drill Motor, Drill Motor, 14mm & 17mm Open End Box Wrench, 17mm & 14mm Socket, Ratchet, Vice Grips.

**Hardware (Please check for all hardware before beginning installation):** Driver & Passenger Side Gravel Guards, (4) 6mm x 1.0 x 16mm Bolts, (8) 6mm Fender Washers, (4) 6mm Nylock Nuts, (10) #10 x 3/4 Tek Screws


1. First disconnect the headlight wiring. Next remove the cotter pins from the hood pins, and slide out the hood pins. Remove hood and set aside in a safe place.
2. Remove front bumper using 14mm open-end box wrench, 17mm socket, and 10mm socket.
3. Raise and safely support front of Rhino. Remove front wheels and tires.



4. Remove upper shock bolt on drivers side using 14mm and 17mm open-end box wrenches. Pull upper part of shock away from upper shock mount.

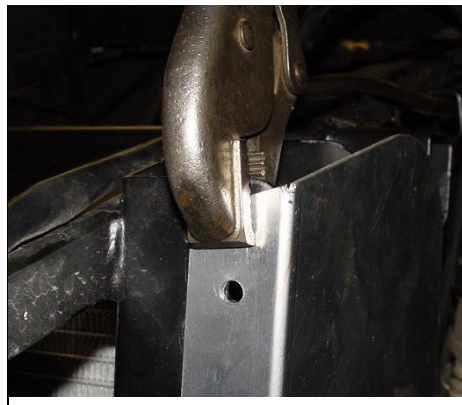

5. Grab drivers side gravel guard and slide it between the shock and shock mount. Align upper part of gravel guard flush with top part of frame near radiator. Use vice grips to clamp gravel guard to frame in position.

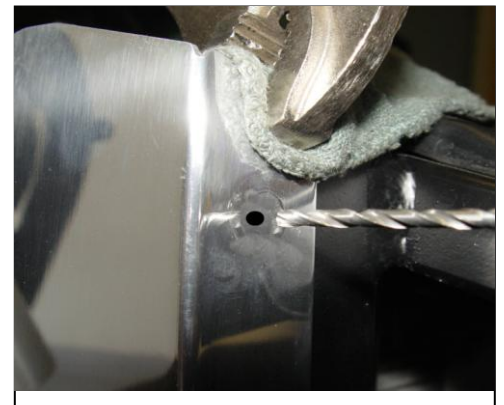

6. Using the drill motor and 1/8" drill bit, drill through existing holes in Gravel Guard and into the frame. Install Tek Screws into these three holes. Do not tighten screws completely, leave slightly loose until step #9.



7. For this step, pliers may be needed to "tw eak" the gravel guard rear mounting tab for better fitment. Using the 1/4" drill bit, drill top hole on rear mounting tab through plastic firewall. Install bolt, washers, and nylock nut finger tight.



8. Using the 1/8" drill bit, drill one hole through bottom of gravel guard into bottom of frame. Install one Tek Screw. Do not tighten screw completely, leave slightly loose until step #9.

9. Now, with everything in place, go back and drill second hole in firewall and bottom of frame. Install required hardware in both holes. Tighten all bolts.

10. Re-assemble upper shock mount with shock in place.

11. Repeat steps 1-10 on passenger side.



Please contact OMF Performance Products if you have any questions or concerns.

Phone: 951-354-8272

Fax: 951-354-8599